


Measuring “Regular Wainscoting” with Windows and Doors

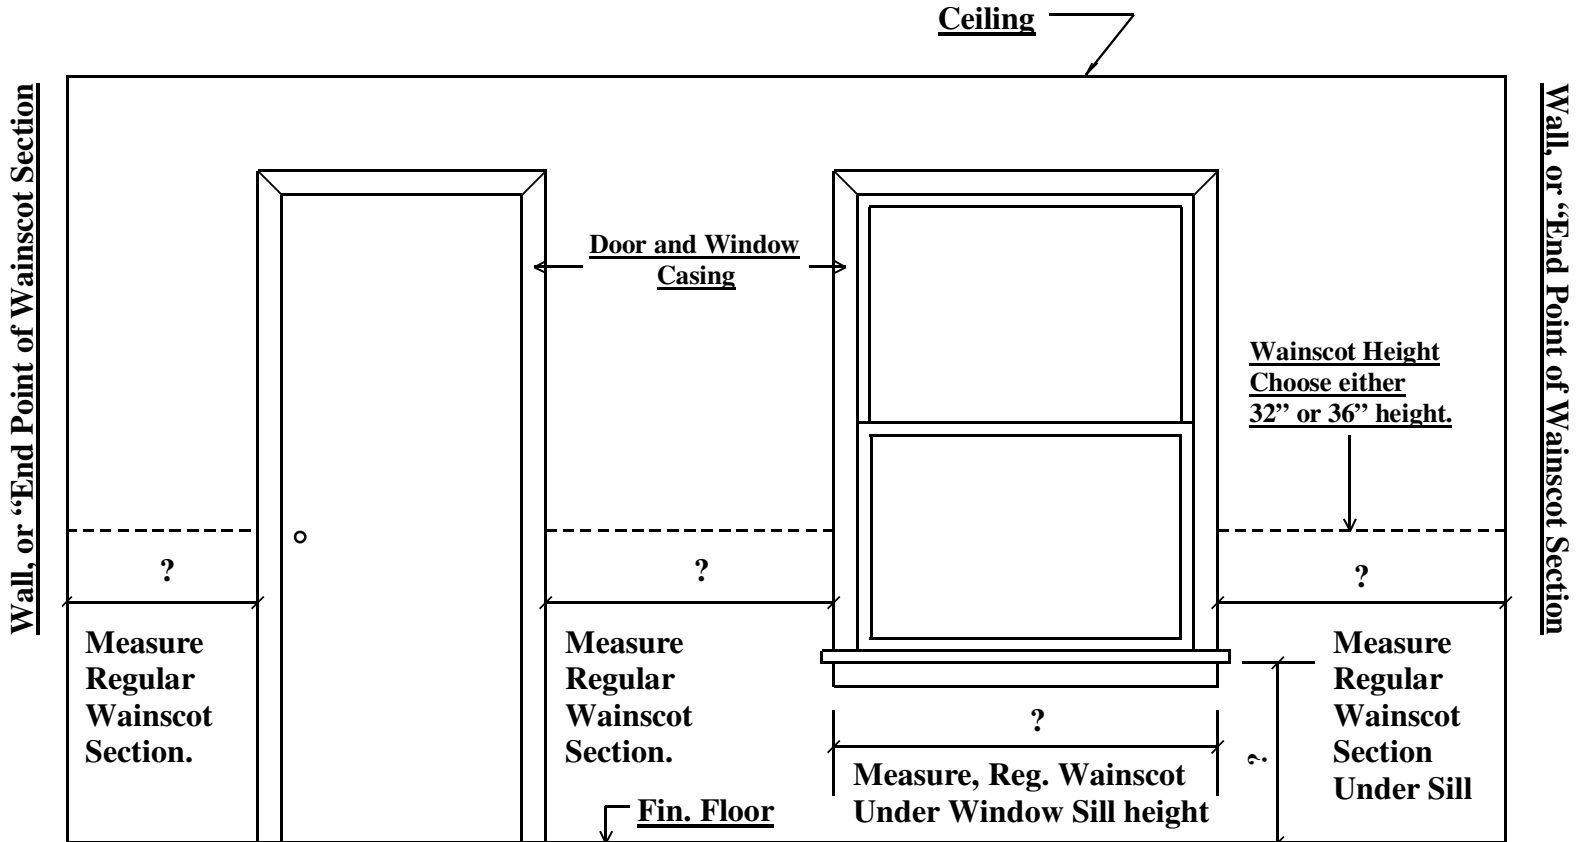

Things to remember!

- 1) Each wall to receive Wainscoting is a “Wainscot Section” (Run).
- 2) Label each Wainscot Section with a “Letter Designate”. Ex. Wainscot Section “A”.
- 3) Wainscot Panels, when measuring & install, butt to existing door or window casing & bottom of sill.
- 4) If your Wainscot Section has Base Board Heating. Make sure that a 5/8” thick Panel can fit between the back of the Base Board Heat Element, or consider the top of heater unit as the Finish Floor. Please Specify.